

ACTUAL SIZE

## **S** V-PIX 4


### SHOCKWAVE V-PIX 4 | WHITE SERIES

The SACO V-PIX 4 pixel chain system is an innovative, lightweight, easily installable solution for low resolution DMX or video pixel applications. The V-PIX 4 chains are sleek and low profile, and designed to be suspended independently or integrated inside custom extruded housings with built-in power supplies. Efficient, high performance lighting is achieved by the ability to select lengths, optics and pixel spacing and chain-to-chain distances. This solid-state solution is reliable and utilizes the latest in LED and SACO Smartvision driving technology.

SACO

# V-PIX 4

## FEATURES GUIDE

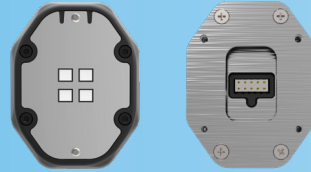

### PHYSICAL

CONSTRUCTION	Aluminum, brushed and clear anodized (default). housing and face plate with silicone encapsulant face
COLOR	Standard gray body Available in optional custom colors
CONNECTORS	Over-molded quick-connectors
LOUVRE SYSTEM	Optional
MOUNTING	Quick-Clip System
WEIGHT	0.3lbs (0.14kg)/0.2lbs (0.08kg)

### THERMAL

OPERATING TEMP	-40°C to 85°C (-40°F to 185°F)
----------------	--------------------------------

### ELECTRICAL

INPUT VOLTAGE	44-54VDC (48 VDC Typical)
POWER	1.5W per V-Pix (max, @ full white)
CONTROL INPUT	SACO SVB V-Brain controller, varying levels of power available SACO V-Stream Video Protocol
MAX DAISY CHAIN	120 V-Pix/ V-Brain(SVB-1200)
MAX CABLE	100m (328ft) between V-BRAIN and V-PIX chain

### LIGHT OUTPUT

PIXEL TYPE	High brightness 3-in-1 LEDs by Nichia
PIXEL PITCH	Variable
PIXEL COUNT	4 Pixels
COLOR DEPTH	16-bit High Color per channel (65,536 shades per channel) 48-bit Deep Color per pixel (281 trillions shades per pixel)
DIMMING LEVELS	256 levels (8 bit)
GRAY SCALE	1,024 shades
VIDEO/DATA	48 bits (16 bit/color)
VIEWING ANGLE	170° (Horizontal and Vertical)
VIEWING DISTANCE	> 30ft (10m)
LIFETIME	150,000 hrs+

### SHOCKWAVE ACCESSORIES

CABLES	Primary cables from 9m (30ft) to 21m (69ft) to connect V-PIX to VSVB V-BRAINS Jumpers to connect V-PIX to V-PIX
--------	--


### ADDITIONAL INFORMATION

CERTIFICATION	IP 65, suitable for wet locations
WARRANTY	5 years
ORIGIN	Designed and made in North America



# S V-PIX 4

## SPECIFICATIONS GUIDE

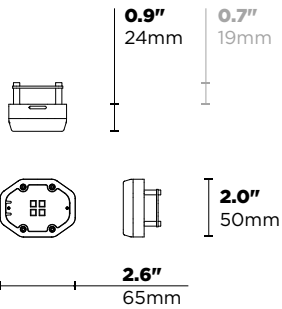

MOUNTING HARDWARE VERSION, SEE ACCESSORIES GUIDE FOR MORE.  
(ADJUSTABILITY AND MOUNTING DIMENSIONS IN GREY)